

## REGISTRATION INSTRUCTIONS

Prior to operation of the DX200 system, each Belt-pac must be registered for use with a specific base station. The base station will then recognize all registered Belt-pacs when their power is on, differentiating between them and interfering transmissions from other electronic equipment operating on similar frequencies. If a Belt-pac is added or replaced later, the new one must be registered. When a Belt-pac is replaced, the old one remains in memory. A maximum of 15 Belt-pacs can be registered to a single base station. If the maximum number of 15 (in memory) is exceeded, an **F** will appear in the **REGISTRATION STATUS** display on the base station and you will hear "**Registration failed**" in the headset. If this happens, refer to the last section on the back of this sheet.

### Register each Belt-pac as follows:

**NOTE:** Belt-pacs must be within 6 feet (1.83 meters) of the base station while being registered.

- Be certain all Belt-pacs to be registered are powered off and the base station power is on. Other Belt-pacs can be on or off.
- Press the **REGISTER BELT-PAC** button shown in Figure 1.
  - After you press the **REGISTER BELT-PAC** button, the **REGISTRATION STATUS** display will show a small "o" for open.

**NOTE:** To press the **RESET** button, insert a small paper clip or similar object into the **RESET** hole.



Figure 1. Registration buttons and indicator on left front panel of base station

Press and hold the **ISO** button on the Belt-pac while pressing and releasing the PWR (power) button to turn the unit on, then release the **ISO** button. This will cause the Belt-pac to enter the registration mode.

— The two power lights next to the **IC** and **ISO** buttons on the Belt-pac will begin blinking red, then will blink green two or three times and go off momentarily.

— **Wait!** There may be a short delay.

— One of the following will happen.

If Registration is Successfully Completed:	If Registration Failed:
<p>— A voice message in the headset will say “Power on, Belt-pac #, Version #, Begin registration, <b>Registration complete</b>, ...”</p> <p>— After a delay of up to 15 seconds (in some cases), the <b>REGISTRATION STATUS</b> display will show the ID number assigned to this Belt-pac, momentarily. <b>NOTE:</b> ID numbers are assigned sequentially as 0 thru 9, A, b, C, d and E.</p> <p>— The power light on the Belt-pac, next to the <b>IC</b> button, will remain on steady green.</p>	<p>— A voice message in the headset will say “Power on, Belt-pac #, Version #, Begin registration, ...” Both power lights on the Belt-pac will be blinking red, and there may be a delay of up to 90 seconds before you hear “<b>Registration failed.</b>”</p> <p>If the failure is due to excessive (more than 15) Belt-pacs registered, an <b>F</b> will also appear on the <b>REGISTRATION STATUS</b> display. If this happens, follow the instructions at the bottom of this page.</p> <p>— Press the <b>RESET</b> button. (See Figure 1.)</p> <p>— When the <b>REGISTRATION STATUS</b> display goes blank, press the <b>REGISTER BELT-PAC</b> button and repeat the registration procedure.</p> <p>— If registration fails again, call (in the USA) HME Customer Support at <b>1-800-848-4468</b> or (outside the USA) your local HME representative for assistance.</p>

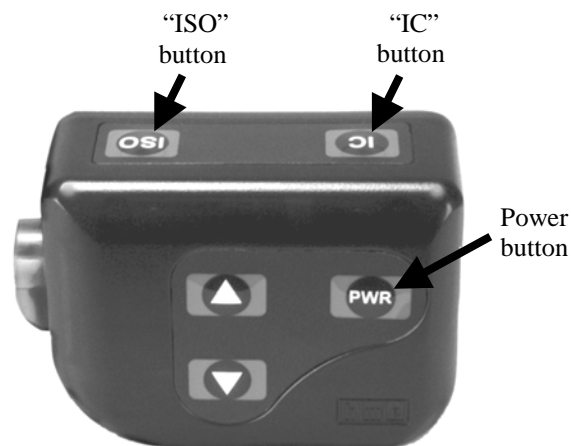


Figure 2. Registration controls on Belt-pac

### When the maximum number of Belt-pacs (15) is exceeded:

If a Belt-pac is replaced, the new one must be registered and the old one remains in memory. If the maximum number of 15 (in memory) is exceeded, all current registrations must be cleared and all active Belt-pacs must be re-registered. To clear all current registrations, press the **RESET REGISTRATION** button and the **RESET** button simultaneously. To press the **RESET** button, insert a small paper clip or similar object into the **RESET** hole at the lower-left corner of the base station front panel. Refer to Figure 1. Continue holding the **RESET REGISTRATION** button after releasing the **RESET** button, until the clear code “c” (lower case) appears momentarily on the **REGISTRATION STATUS** display. All active Belt-pacs can then be registered, one at a time. (Previously registered Belt-pacs must be re-registered.)